


Pairlock Handle & Pairlock Auxiliary TEMPLATE


in(mm)

$\Phi 1(\Phi 25.4)$

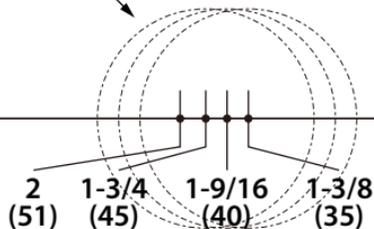

FOR BACKSET 2-3/8(60)

$\Phi 2-1/8(\Phi 54)$

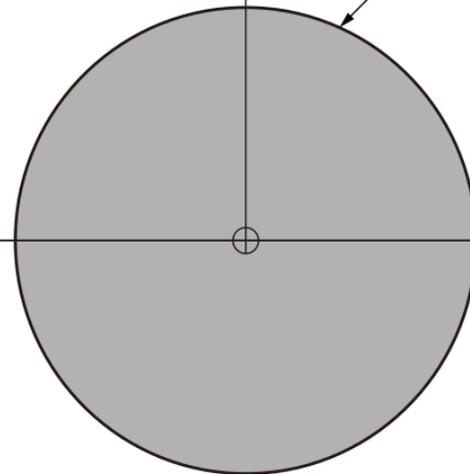

Make 1inch(25.4mm) hole
at the center of door edge

◀ Fold on dotted line and fit on door edge